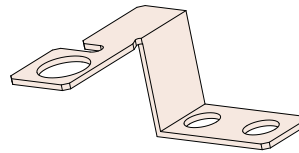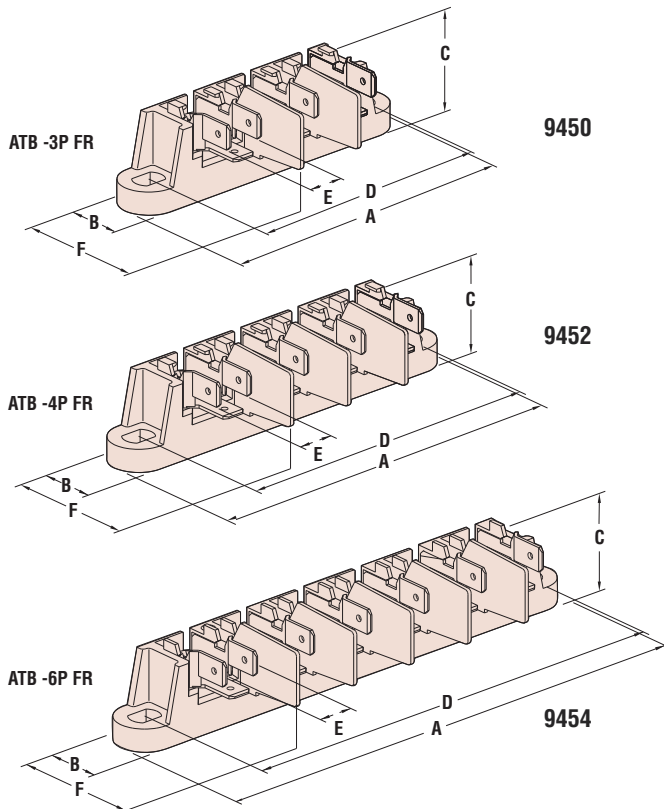# Heyco® Screw to Tab Terminal Blocks

Screw to (3) Tabs Flame Retardant and UL 94V-0

WIRE SIZE		AMPS	POLES	PART NO. White	DESCRIPTION	Screws (Metric)	PART DIMENSIONS										
AWG	mm²						A		B		C		D		E		F	
							in.	mm.	in.	mm.	in.	mm.	in.	mm.	in.	mm.	in.	mm.
8-18	10	40	3	**9450**	ATB-3P FR	M5,0	3.19	81,0	.59	15,0	1.00	25,4	2.60	66,0	.41	10,4	1.48	37,5
				9451	ATB-3P FR w/ Ground													
8-18	10	40	4	**9452**	ATB-4P FR	M5,0	3.90	99,0	.59	15,0	1.00	25,4	3.31	84,0	.41	10,4	1.48	37,5
8-18	10	40	6	**9454***	ATB-6P FR	M5,0	5.31	135,0	.59	15,0	1.00	25,4	4.72	120,0	.41	10,4	1.48	37,5
				9455*	ATB-6P FR w/ Ground													
				9456	Jumper for Screw to Tab Poles													
				9457	Ground for Screw to Tab TB													

Standard color flame retardant white.

*Includes three jumpers. To order additional jumpers, see part 9456.

ATB -3P FR   C, E, D, A, B, F   **9450**

9457 GROUND CONTACT

ATB -4P FR   C, E, D, A, B, F   **9452**

9456 JUMPER

ATB -6P FR   C, E, D, A, B, F   **9454**

- **Three .250˝ by .031˝ (6,3 by 0,8 mm) tabs per pole**.
- ATB-3P poles are marked 1, 2, and ⏚ .
- ATB-4P poles are marked 1, 2, 3 and ⏚ .
- ATB-6P poles are marked 1, 2, 3, 4, 5 and ⏚ .
- All sizes are rated at 600 volts (450 volts in Europe).
- Self-grounding version is available. Identical to the base parts except that an extension on the grounding pole makes direct contact with the panel. The extension is secured with two self-tapping screws.
- Ground contact (**Part No. 9457**)– Grounds terminal block to the panel. May be ordered separately or with the listed Appliance Terminal Blocks.
- Jumper (**Part No. 9456**)– To connect terminal block poles. For use with Heyco's Screw to Tab terminal blocks.
- DFARS Compliant

Materials	6/6 Nylon and galvanized steel
Certifications	ᶜ🆄🅛ᵤₛ Recognized under Component Program of Underwriters' Laboratories to both Canadian and US requirements File E197025
Flammability Rating	94V-0
Temperature Range	-.4°F (-18°C) TO 302°F (150°C)

Quick Specs